
 
Tess Planter instructions by Most Modest**

Included in Package:

 


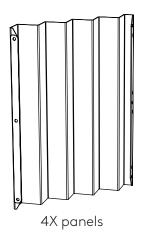


8X top/shelf cam locks




tray support




4X leveler cam locks

 

tray liner

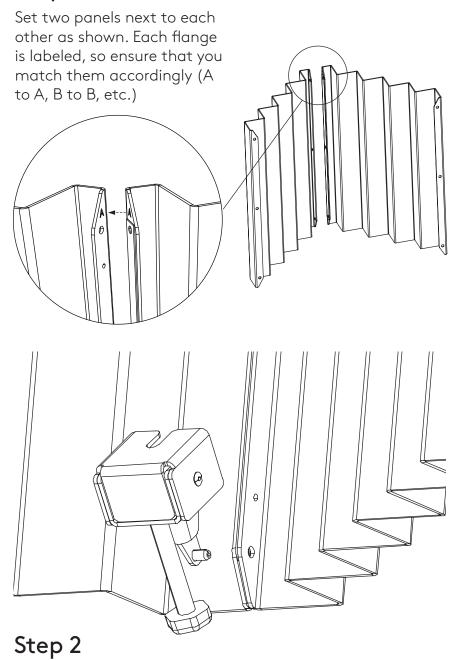



Begin assembly with the leveler cam locks first. Insert a leveler cam lock into the bottom hole from left to right.

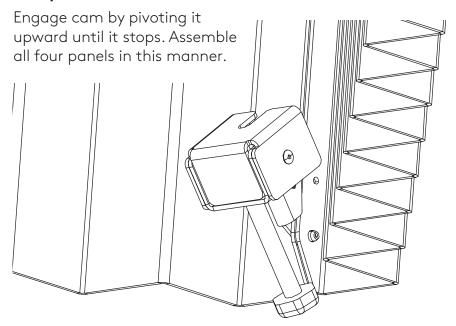

Step 4

Decide at which height you want your tray. If you want your tray in the bottom position, proceed to Step 5 now. If you want your tray at the middle-height position, skip to Step 6, then go back to Step 5.

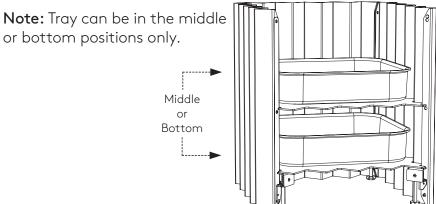

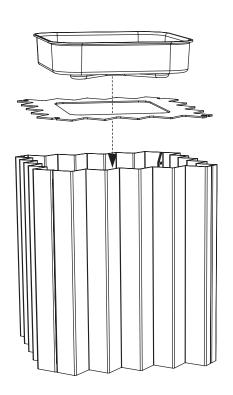


Insert tray support from top. Then insert tray liner.


Note: Tray contents limited to 100lbs.

Step 6

If the middle shelf position is desired (for smaller plants), use the extra set of top/shelf cam locks in the center holes.

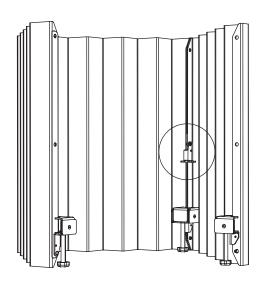


Insert top cam through the holes at the top of every panel, joining two panels together.

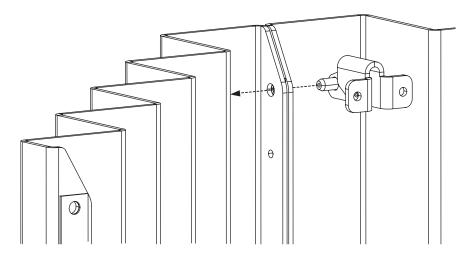

Step 8


Engage cam by pivoting it downward until it clicks.

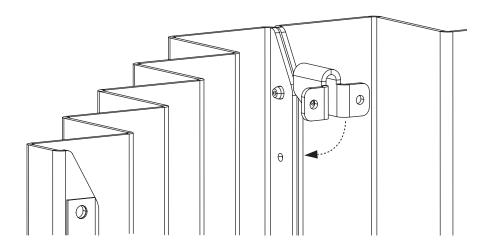

Configuring Multiple Tess Planters


Tess is intended to nest with other Tess planters as shown in **Fig. A**. In some configurations your Tess planter may end up being offset, as shown in **Fig. B**.

If you are unable to fix the problem by simply rotating a square Tess, follow the next steps to rebuild **ONLY the rectangular Tess unit**.

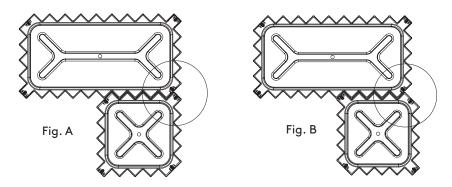



Step 1

Remove top cams.

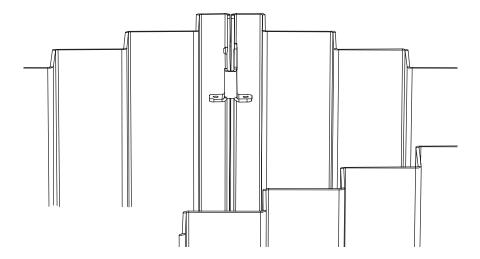

 
Remove the tray liner and tray support, and then flip Tess upside down, so that the bottom side is facing upward.

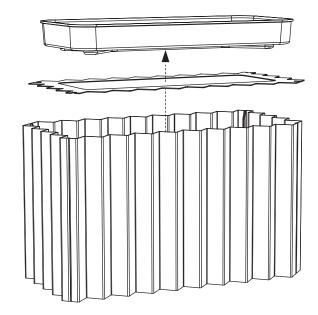




Step 3

One at a time, move each leveler cam lock to the new bottom holes (the former top cam hole positions).

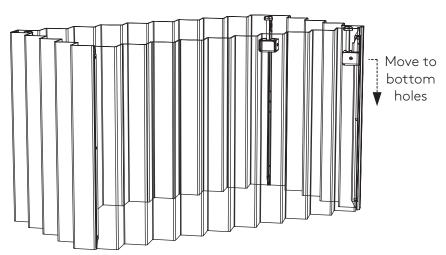


Insert tray support from the top. Then insert the tray liner.

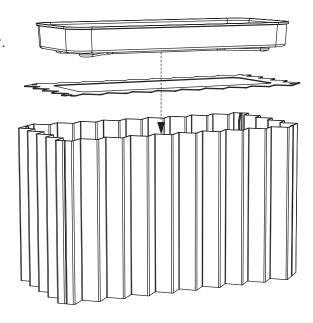

Step 5

Re-install top cams.

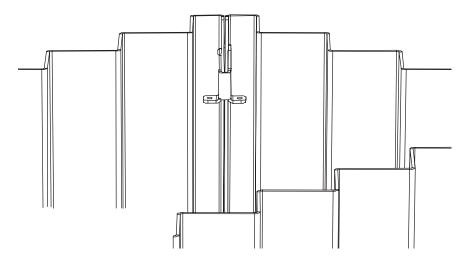

www.mostmodest.com 20210.000.000 Rev B